

247blinds

ULTRA BLACKOUT BLIND

FITTING GUIDE

 Fitting Time: Approx. 15 Min



WARNING: PLEASE READ THE INSTRUCTIONS BEFORE OPERATING THIS PRODUCT




THE INSTALLATION OF THIS PRODUCT SHOULD BE
CONDUCTED BY SOMEONE COMPETENT IN DIY.

WHAT YOU'LL NEED


Screwdriver



Drill

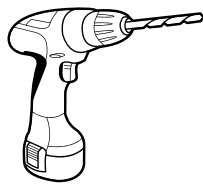

Spirit Level




Pencil




WHAT'S IN THE BOX

Left side channel


Right side channel

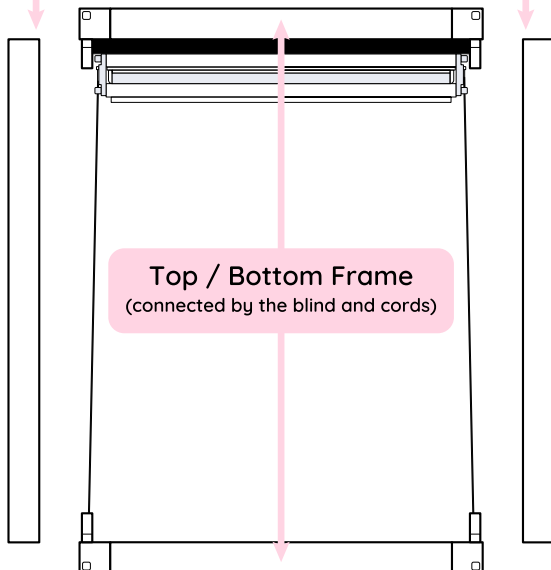


Screws*




Rawl Plugs*

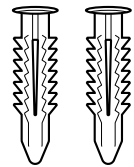

Foam strips

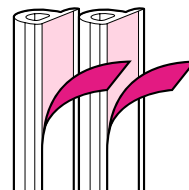

Corner cover caps (x4)

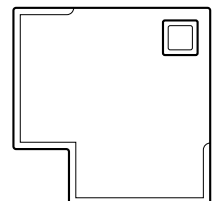


*The taller the blind, the more of these you will have.


STEP 1 - ASSEMBLING THE BLIND

Carefully unwrap the blind components.

The blind will have the top and bottom parts of the frame connected by a cord on each side. Unravel the cords and extend the top and bottom rails.

Lay out the blind on a clean surface.

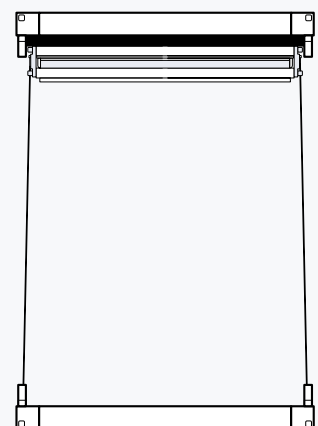

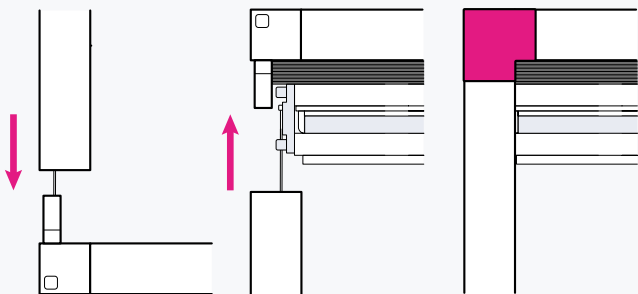

Build the frame – select the left frame component and guide on to the exposed arms of the bottom left corner joint. **Ensure the cords run down the inside of the channels and don't get trapped when slotting the frame pieces together.**

Repeat the process on the top left corner joint.




Repeat the same process on the right side.

Push on corner cover caps.

STEP 2 - INSTALLING THE BLIND

Select installation position, ensuring to be clear of any obstructions when the blind is lowered and raised, and **at least 50mm** from the window to avoid thermal build up.

Insert the blind into the recess and ensure the blind is level using a spirit level.

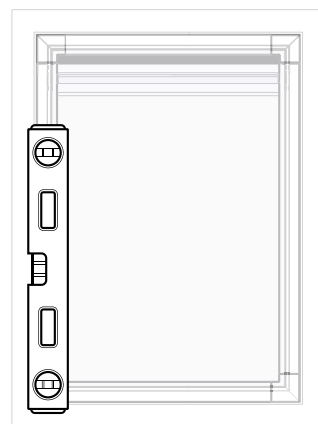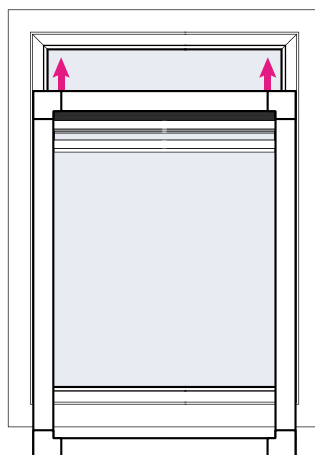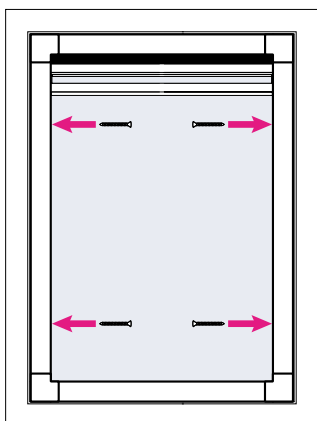

Hold the blind in position, use a pencil to mark drill holes for side channels onto the walls of the recess.

Take the frame down, drill holes where previously marked, and insert rawl plugs.


Put frame back up.

Move the guide cords out of the way and screw the frames securely into position.

The blind is now installed.

STEP 3 - FINISHING TOUCHES

If the window is slightly out of square, you may need to install the foam strips along the back of the frame and along the recess wall to block any excess light creeping through.

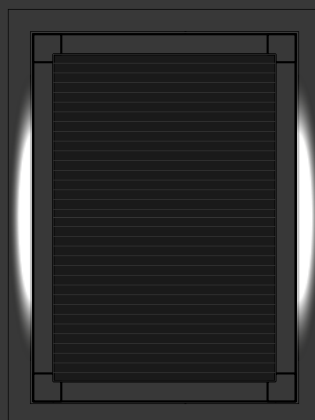

CHILD SAFETY



WARNING

Whilst Ultra Blackout blinds are child safe by design, as with all window dressings they still pose a risk if used unsafely or installed in an unsafe location.

To ensure your blind is as safe as possible please ensure all beds, cots or furniture that can be climbed is moved away from the window.

While these blinds do pose minimal risk in regards to choking or strangulation they can still be pulled off the window and cause a risk of crushing or injury.

If the blind is pulled from the window frame, ensure there is no damage, and install the blind back onto your window.