


247blinds

ULTRA BLACKOUT BLINDS

LET'S GET MEASURING!

MEASURING FOR YOUR BLIND

You will need a metal tape measure and a pen/pencil.

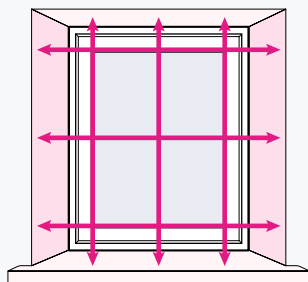

MEASURING WIDTH

Take **3 measurements** across the width of the top, middle and bottom of the recess. The **smallest** measurement will be your blind width. (We will make your blind 2mm narrower for a snug fit.)

MEASURING DROP

Take **3 measurements** from the top down, along the left, middle and right of the recess. The **smallest** measurement will be your blind drop. (We will make your blind 5mm shorter for a snug fit.)

Be aware that some obstructions may mean this product is not suitable:

- Out of square windows recess of more than 15mm
- Interior recess decorations (tiles, architraves, trims)
- Sloped walls or sills
- Window handles

Need some help? We're here—call us on **01484 443790**

NOTE: We recommend a minimum recess depth of 80mm, so the product is away from the window to reduce thermal build up.

MAKE A NOTE OF YOUR MEASUREMENTS

| Blind/Colour/Location | Width | Drop |
|-----------------------|-------|------|
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |

Other Notes

247blinds.co.uk



All measured up?
Placing your order couldn't be easier.
Scan here to be taken to our website.
or call 01484 443790

EASY
TO FIT



Be inspired



247 Home Furnishings Ltd trading as 247Blinds
Unit A, Trident Business Park, Huddersfield, HD2 1UA.